



The Lowrider is mounted at the front swingarm and can carry two front panier bags. Because of its fixation at the front swingarm the front panier bags belong to the suspended mass and your luggage is protected from shocks. The non-suspended mass does not increase and so the front suspension will have the same sensitivity as without any loads.

Because of its special design the Lowrider is easy to fold. The max. capacity is 10 kg.

Attention: If the Birdy-Bag is used together with the Lowrider, the max. capacity of the Lowrider reduces to 7 kg. Furthermore the Birdy-Bag could collide with the panier bags. Before riding please check if the bags are fixed correctly and the handlebar can be turned without any restriction.



Scope of delivery

- 1 x Lowrider (black)
- 1 x bolt M5x30
- 1 x bolt M5x35
- 2 x panier bag guide (silver)
- 2 x nut M5
- 2 x washer big
- 2 x plastic washer, black
- 4 x washer small

How to mount the Lowrider

1. Remove the two bolts and washers (Position **A**) at the outer sides of the front swingarm.
2. Insert the bolt M5x35 with a small washer into the left hole and the bolt M5x30 with a small washer into the right hole of the Lowrider.
3. Now assemble in the following order one plastic washer, one big washer, one nut and one small washer onto the bolts.
4. Fix the Lowrider with the pre-assembled bolts. Tighten bolts and nuts until the Lowrider can be turned easily but without any lateral play.
5. Now tighten the nuts against the front swingarm.

How to mount the panier bag guides

1. Remove the quick release of the front wheel. Remove the anti loose washers too.
2. Place the panier bag guides at the left and right dropout.
3. Take care that the lugs **B** engage in the holes near the dropouts.
4. The panier bag guides have to be aligned in that way that the stays **C** are situated behind the front hub.
5. Close the quick release and check it for correct function (see page 19 at Birdy manual).





How to fold the Birdy with Lowrider

The Birdy can be folded as usual. The Lowrider has to be turned upwards before folding the Birdy. Then its position is vertical in front of the head tube. The folding dimensions will be increased only a little.

Attention: In combination with the rear fender stay the folding dimensions will increase a bit. The left panier bag guide will collide with the rear fender stay. By cutting the left panier bag guide for some Millimeters this can be prevented. But then the remounting of some types of panier bags needs more attention.

After unfolding the Birdy the Lowrider can be turned down and the Birdy is ready to ride.

How to remount the panier bags

We recommend the use of Ortlieb panier bags. The bags have to be adjusted that the lower hooks will fit to the stays **C**. The luggage has to be distributed equable to both bags.

! To customers: All of the procedures we are about to describe require a certain degree of skill, suitable tools and mechanical attitude. The procedures should be carried out only by your dealer.

! To dealers: Always give this manual to your customer because it contains important information how to use the products.

