




The very light aluminum kickstand is mounted at the left dropout and fits to all Birdys.

Scope of delivery

- Kickstand
- 1 x Bolt M5 x 16
- 1 x WasherM5

Assembly at Birdy red, black, grey and white

1. Remove rear quick release. If the Birdy is equipped with a SL carrier, remove the bolt M5 x 16 at the left drop out.
2. Fix kickstand with bolt at the dropout (see picture below). Do not tighten the bolt. If a SL carrier is used, place the carrier stay **above** the kickstand plate.
3. Insert the quick release from right side and close it (9-12 Nm).
4. Tighten bolt M5 x 16 (4-5 Nm).

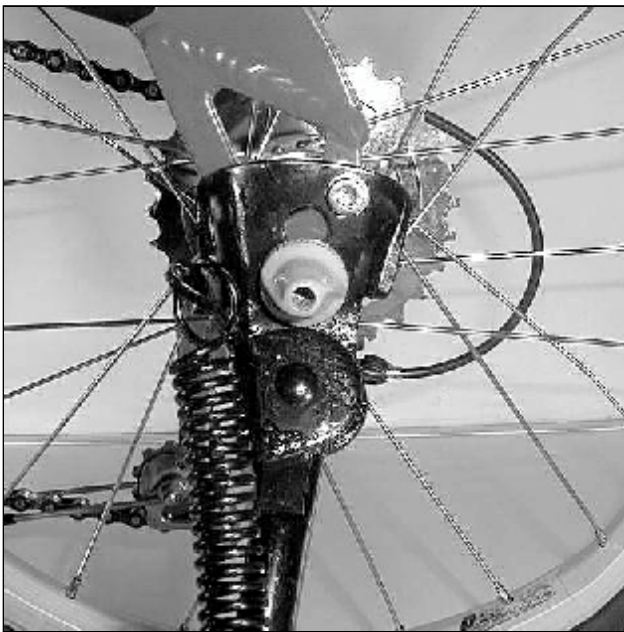


Assembly at Birdy blue

At the Birdy blue the kickstand must be placed above the drop out. It will be fixed by the left axle nut and the bolt M5 x 16. For disassembly of the rear wheel the axle nut and the M5 bolt must be loosened.

Assembly at Birdy green

1. Remove axle nuts and brake arm (Birdy green) or hub shifter cable (Birdy blue) and remove the rear wheel. If there is a washer inside the left drop out remove it too.
2. Place kickstand with its big hole over the left side of the axle and install rear wheel. The kickstand plate touches the inside of the left dropout.
3. Tighten axle nuts (40-45 Nm).
4. Install brake arm (Birdy green) or shifter cable (Birdy blue) again.

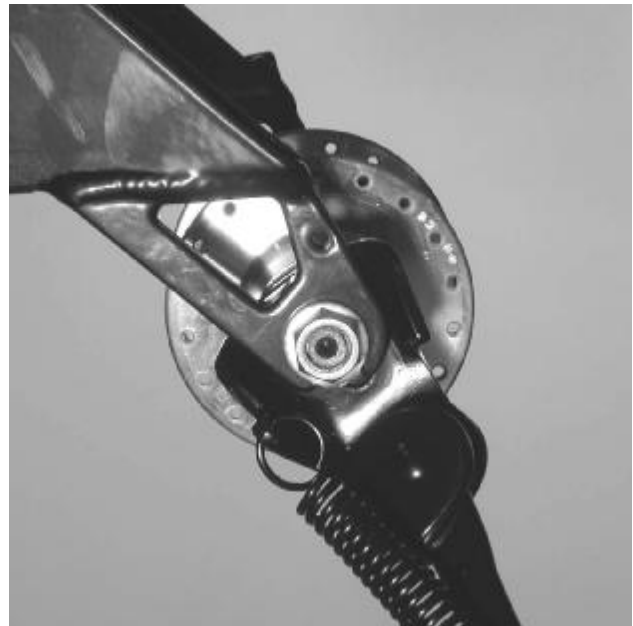

Attention: It may be necessary to true the rear wheel because the wheel center could have moved.

Please also note the informations of the instructions about compatibility of kickstand with other components.

! To customers: All of the procedures we are about to describe require a certain degree of skill, suitable tools and mechanical attitude. The procedures should be carried out only by your dealer.

! To dealers: Always give this manual to your customer because it contains important information how to use the products.

